


SMARTBIN

Full Length - (LHS & RHS)

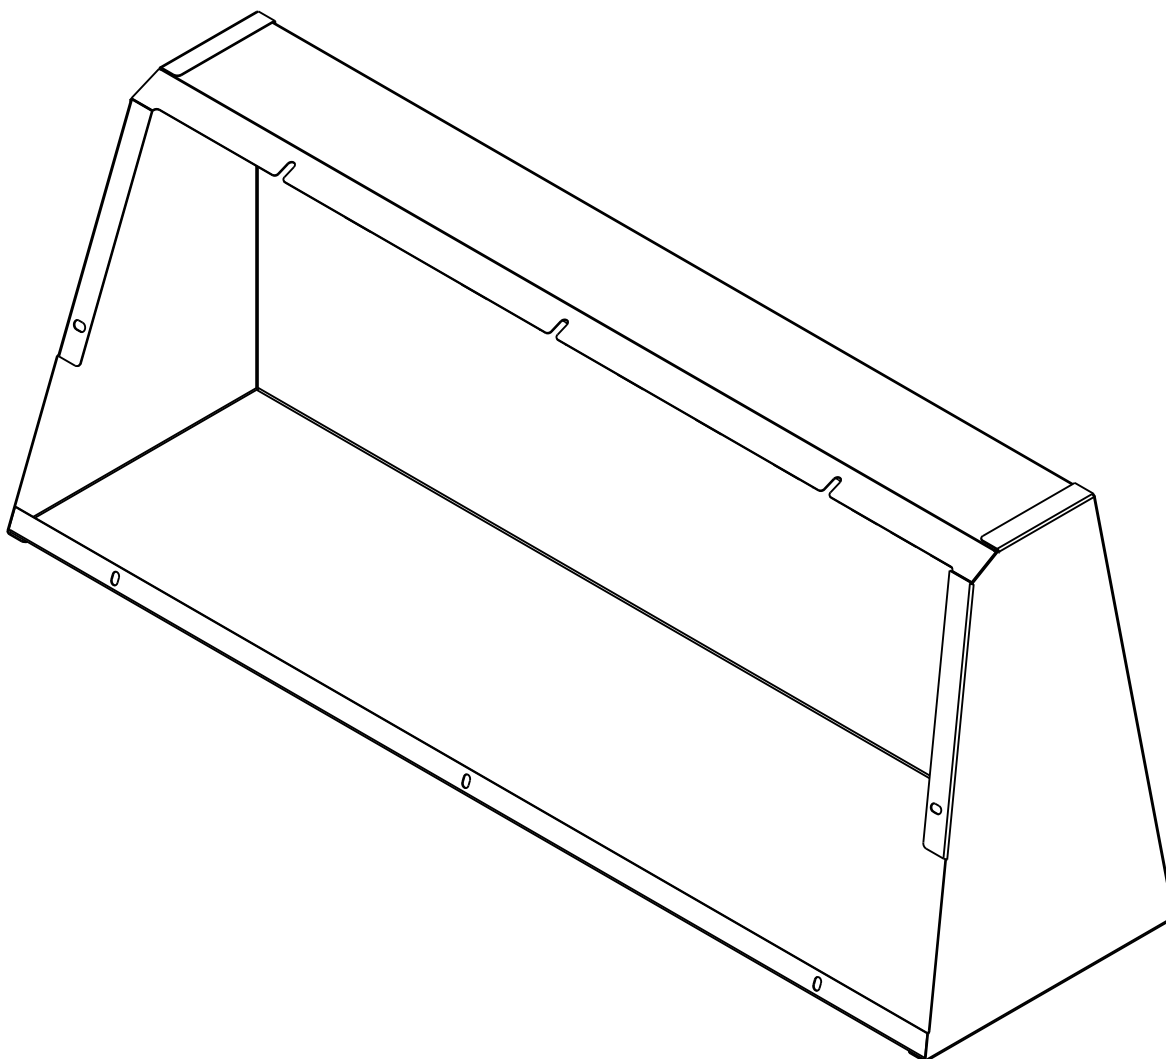

FOLLOW INSTRUCTIONS CAREFULLY TO AVOID DAMAGE TO COMPONENTS OR THE VEHICLE


RSISMARTCAP.COM - SUPPORT.NA@RSISMARTCAP.COM - NORTH AMERICA




COMPONENTS




8X M6
NYLOC NUTS

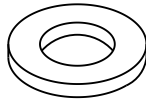

8X M6
FLAT WASHERS

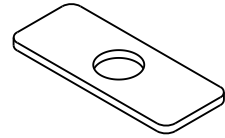


8X LOADSPREADER
PLATES

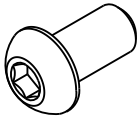


8X M6 X 12
BUTTON HEAD SCREWS


REQUIRED TOOLS

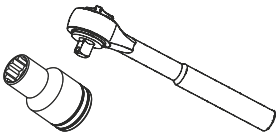


SOCKET WRENCH
10mm SOCKET

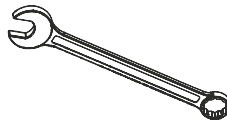

COMBINATION WRENCH
10mm FLAT

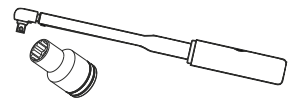

TORQUE WRENCH
10mm FLAT

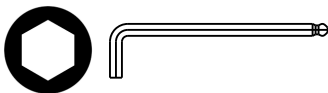

ALLEN KEY SET
4MM


WARNING



- ONLY USE THE RECOMMENDED TOOLS AS INDICATED IN THE INSTALLATION GUIDE ABOVE.
- ONLY USE THE HARDWARE PROVIDED IN THE FITMENT KIT OUTLINED ABOVE.
- HANDLE ALL RSI COMPONENTS WITH CARE UPON UNPACKING.
- IT IS RECOMMENDED THAT THE MINIMUM OF TWO PEOPLE LIFT THE RSI PRODUCT.
- NEVER USE ACETONE ON PAINTWORK

SMARTBIN ORIENTATION:

FRONT

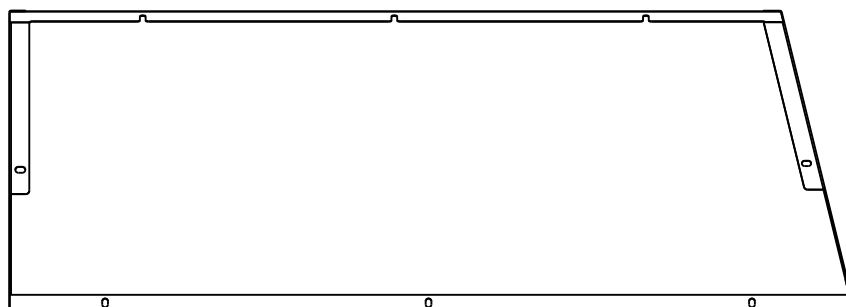


REAR


FITMENT OF THE RSI ACCESSORY

STEP ONE

1. REMOVE THE PLASTIC WHITE CAPS FROM SIDE PANEL THEN PROCEED WITH THE FOLLOWING...
2. HAND FASTEN THE HARDWARE ALONG THE TOP MOUNTING FACE ON THE SIDE PANEL. (SEE FIGURE 1)
3. LIFT THE RSI SMARTBIN UNIT AND HOOK INTO POSITION, A MINIMUM OF 2 PEOPLE ARE RECOMMENDED TO LIFT AND ALIGN THE RSI SMARTBIN. (SEE FIGURE 2)

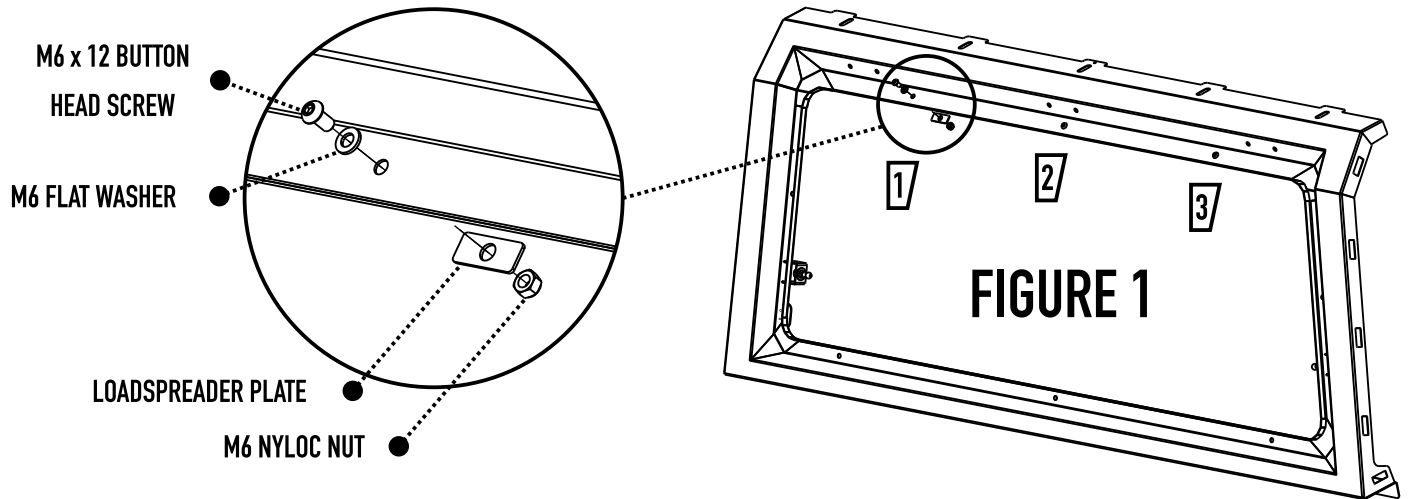

HOOK IN THE SMARTBIN UNIT,
ALIGN SLOTS WITH MOUNTING
POSITIONS ON SIDE PANEL

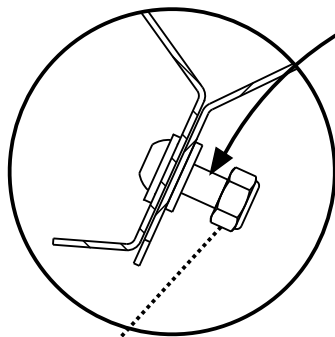

HAND FASTENED

HIDDEN DETAIL SHOWS
SMARTBIN UNIT HOOKED
INTO TOP MOUNTING POSITIONS



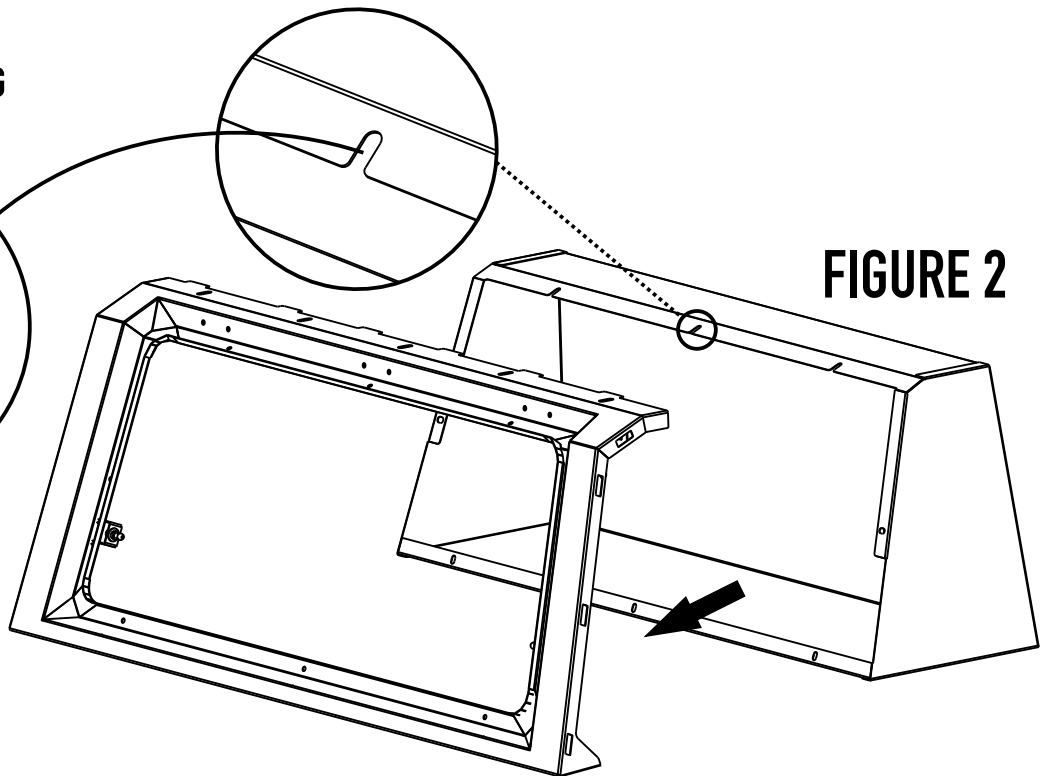


FIGURE 2

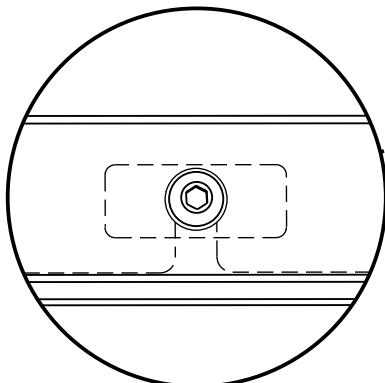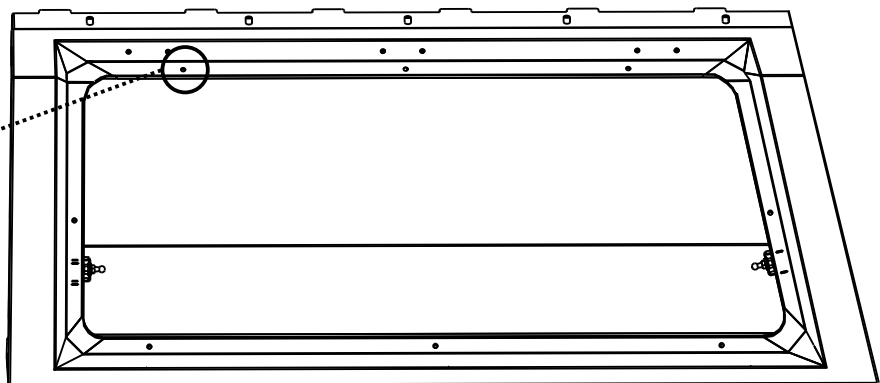

FITMENT OF THE RSI ACCESSORY

STEP TWO

1. WHEN THE TOP IS SECURED FOLLOW THE SAME FASTENING METHOD SHOWN IN FIGURE 3 FOR THE REST OF THE MOUNTING POINTS.
2. ALIGN THE LOADSPREADER PLATES WITH SIDE PANEL EDGE.(SEE FIGURE 4)
3. FASTEN ALL FASTENERS TO 9FT-LB, 108 IN-LB OR 12.2 NM

