


Mountain Top 2

Spare parts

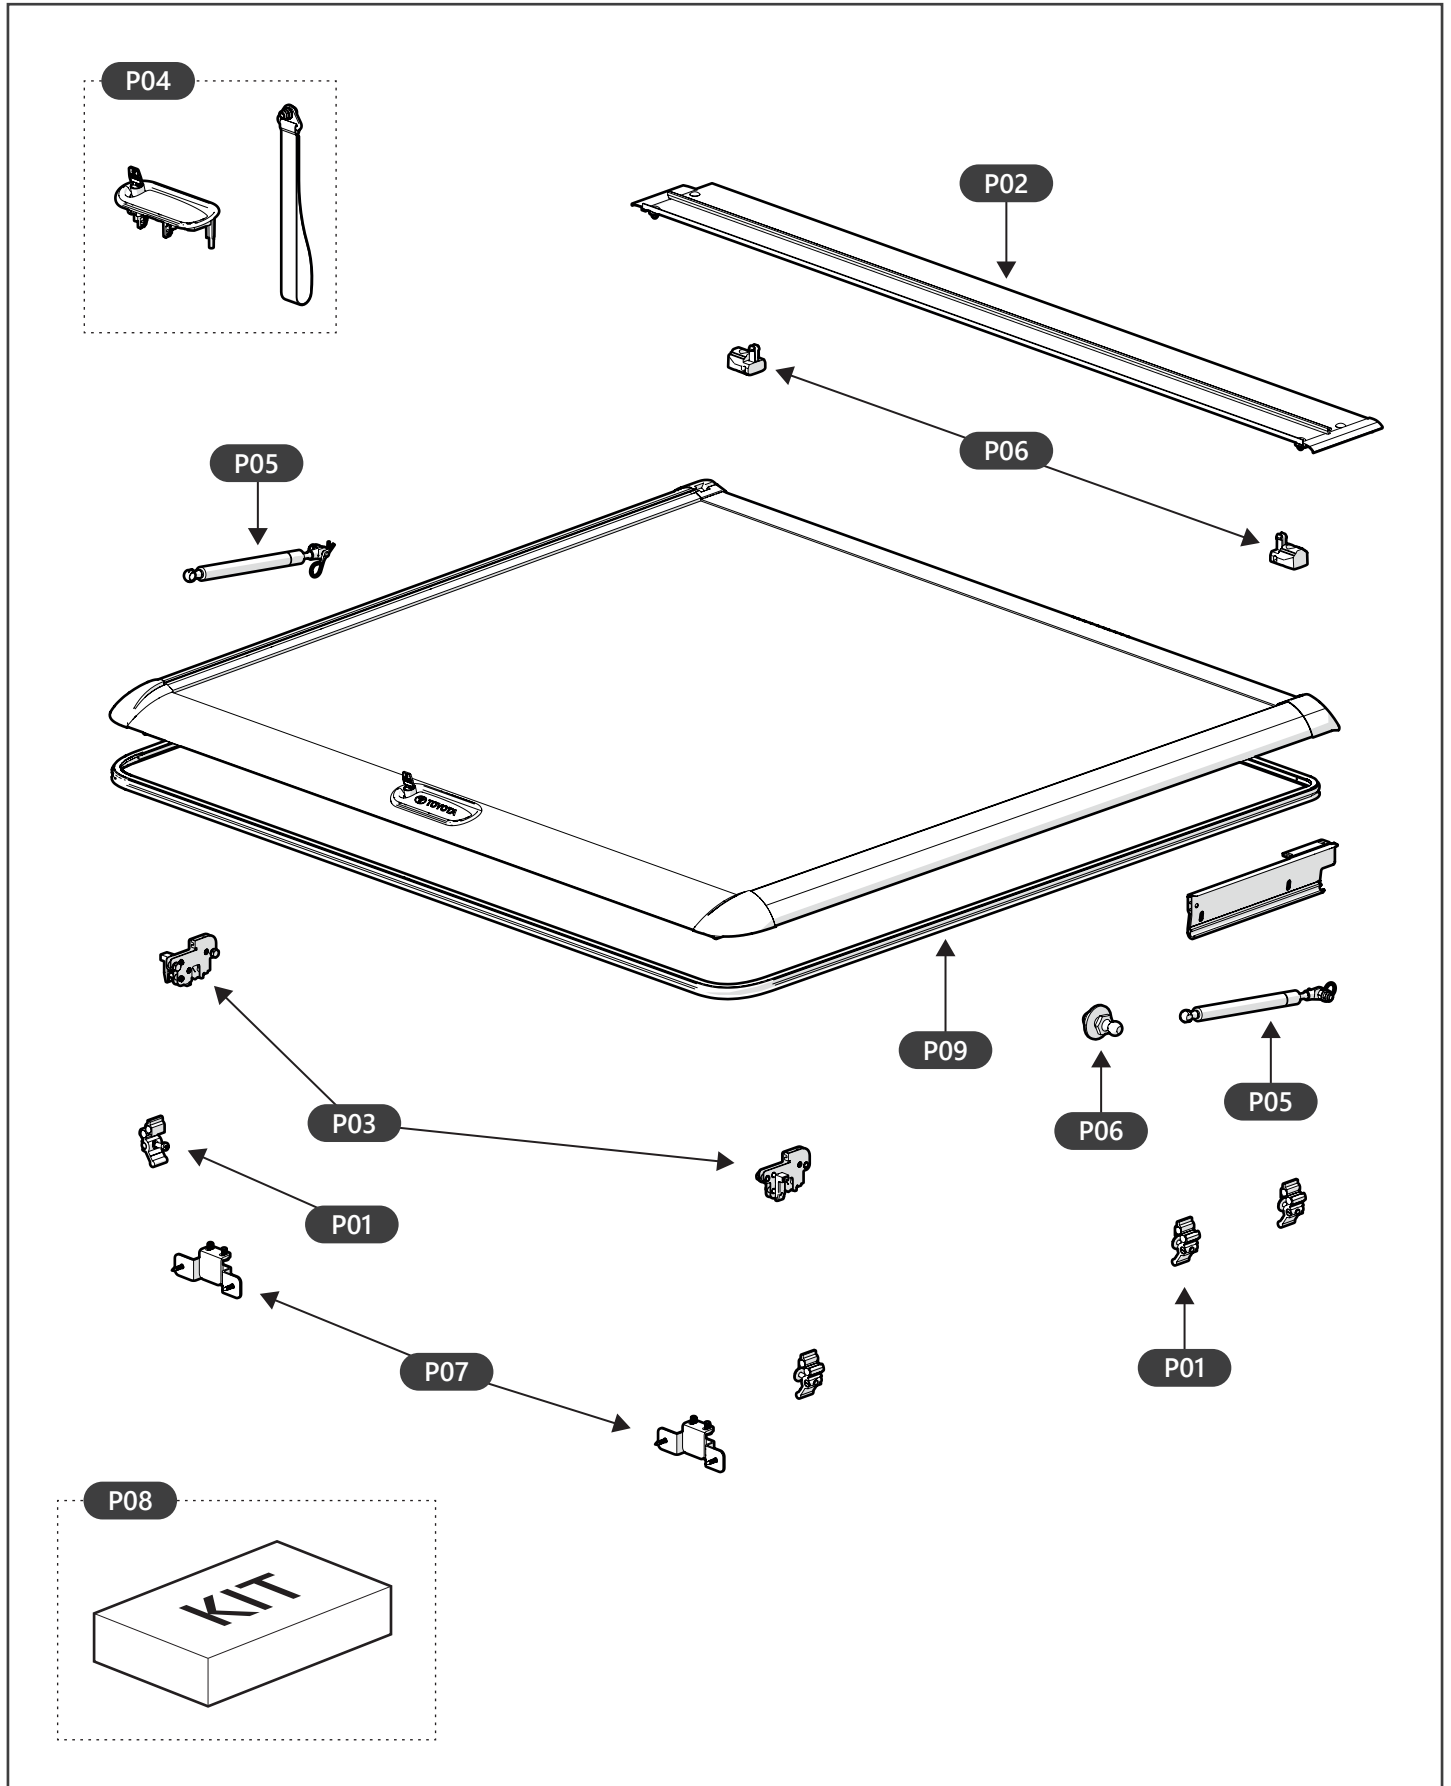


Mountain Top 2


Spare parts




P01

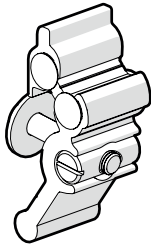


P01aF (front) x 1
P01aR (rear) x 1
TOYOTA (Original)

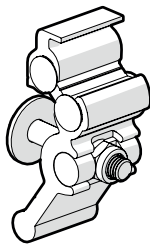


P01b x 1
NISSAN

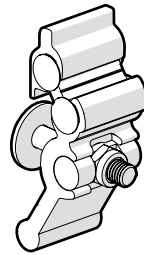


P01c x 1
ISUZU

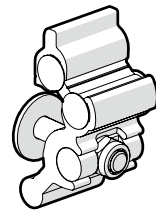


P01d x 1
MITSUBISHI

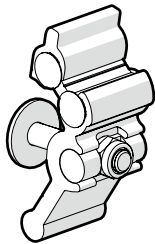


P01e x 1
VOLKSWAGEN

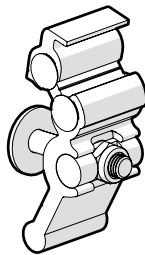

P01f x 1
FORD

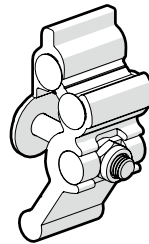


P01gF (front) x 1
P01gR (rear) x 1
TOYOTA (Aftermarket)

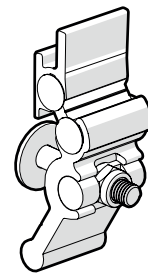


P01h x 1
SsangYong

P02

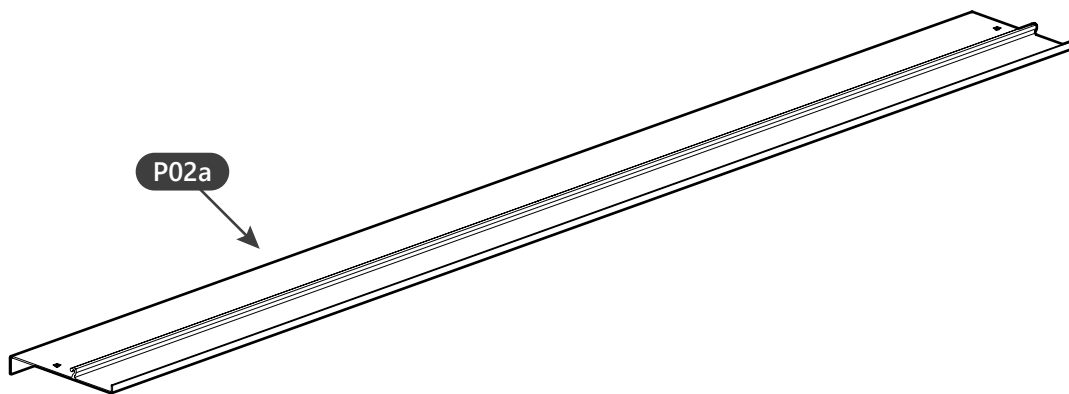


P02a

P02b

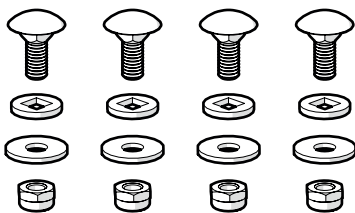

P02c

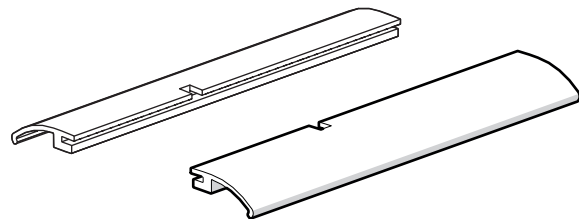



P03

P03a

FORD

P03b

MITSUBISHI

P03c

TOYOTA / VW

P03d


NISSAN

P03e


ISUZU

P03g

SsangYong

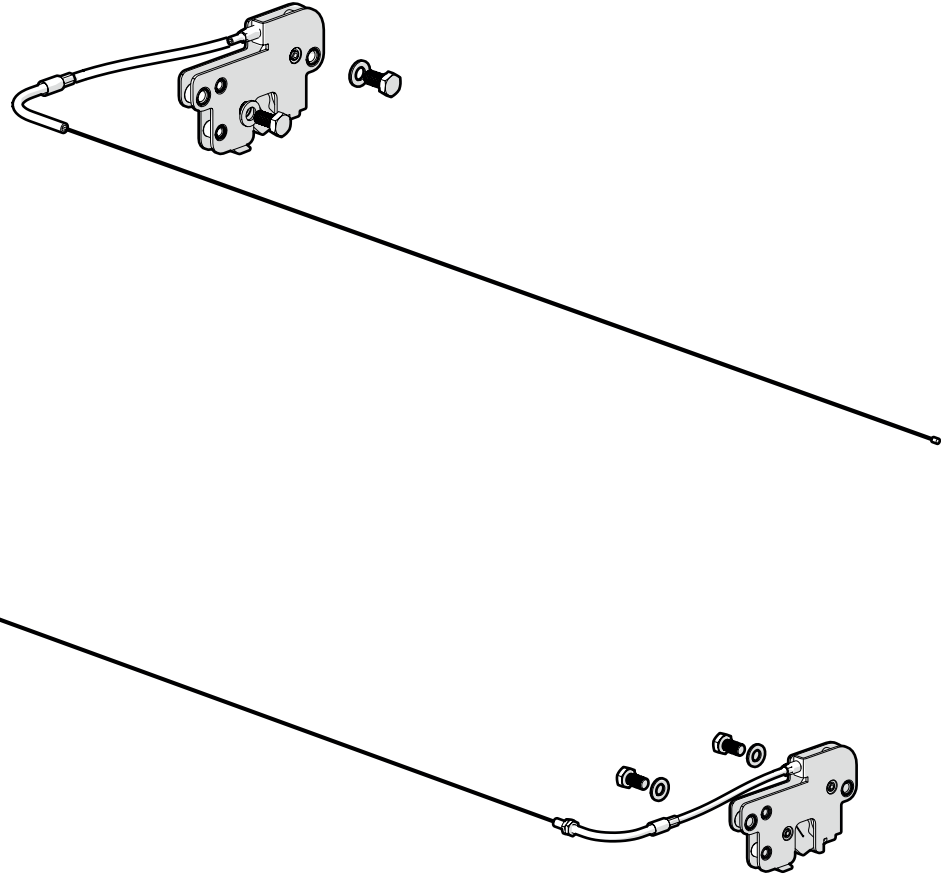





P03f

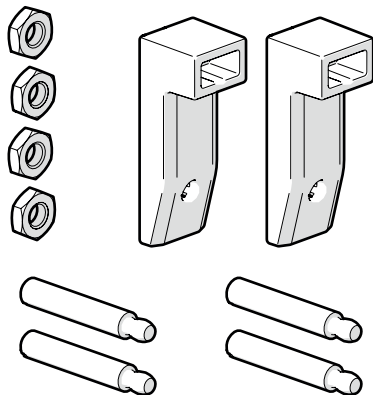



Mountain Top 2

Spare parts

P04

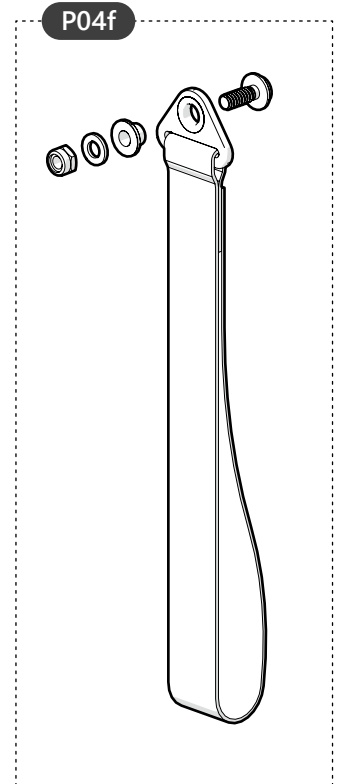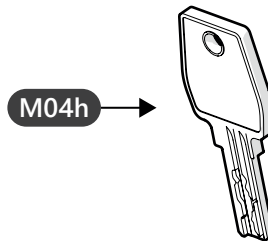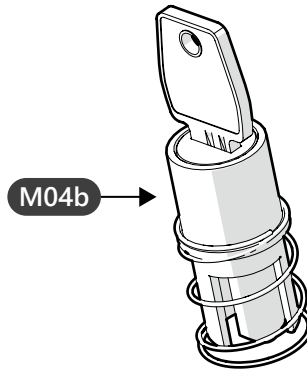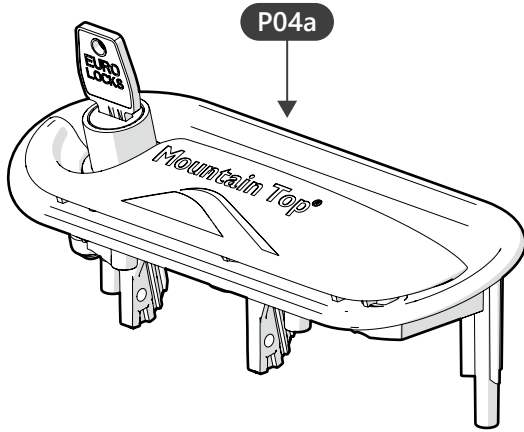

P05

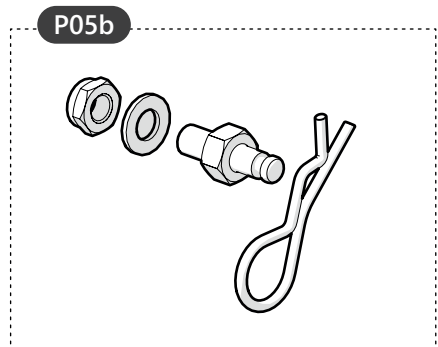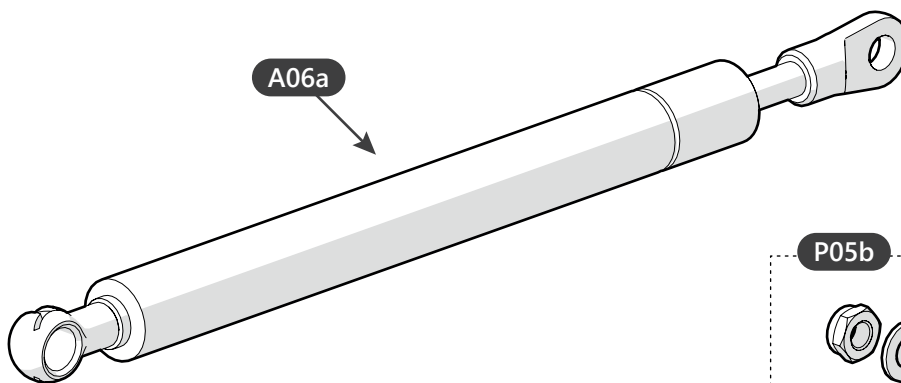


Mountain Top 2


Spare parts

P06

P06a

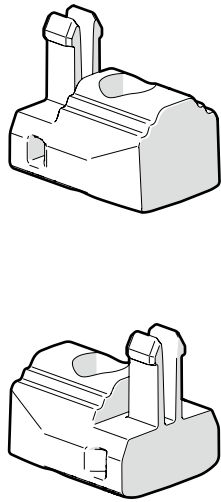


P06b


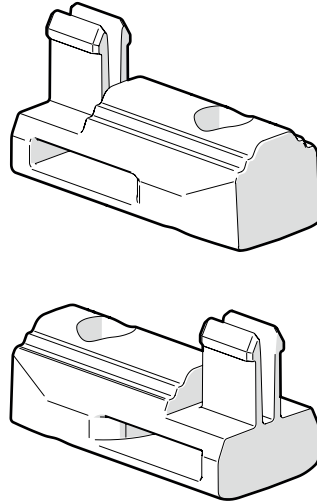


mitsubishi (club cab)

P06c

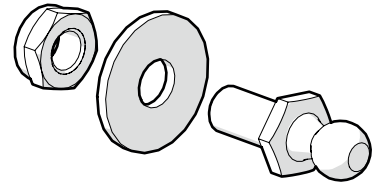

P07



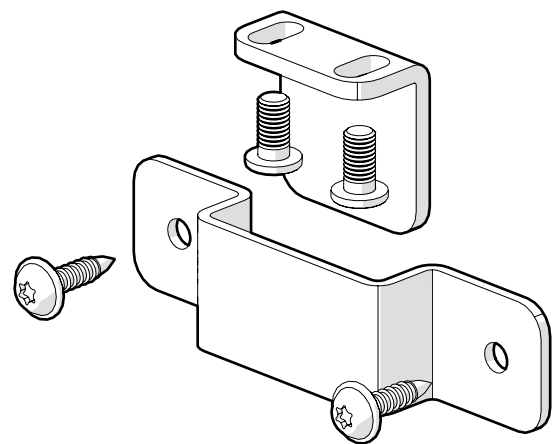
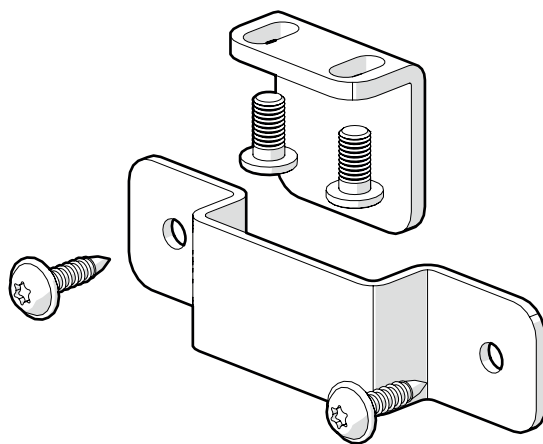


Mountain Top 2


Spare parts




P08

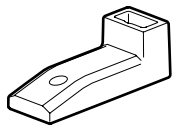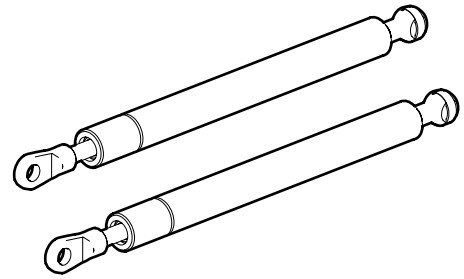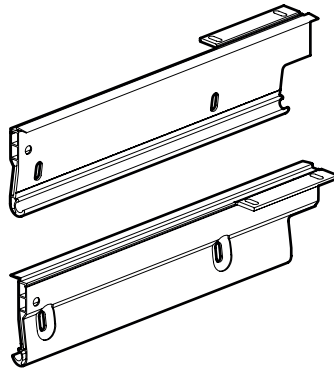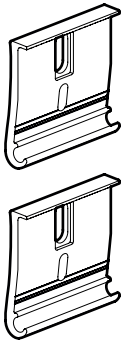


x 2




x 4



x 4




x 1




x 2



x 6

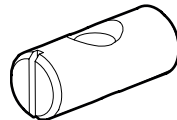


x 6




x 6




x 2

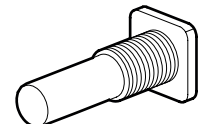


x 2

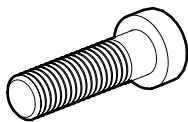


x 6

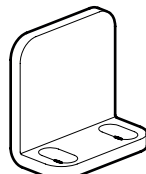


x 2




x 4




x 4

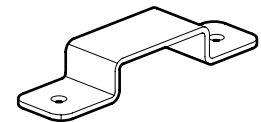


x 2




x 4

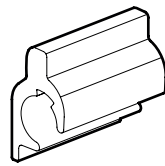


x 6

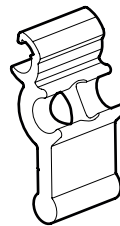

x 6

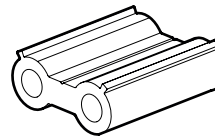


x 6



x 24




x 2

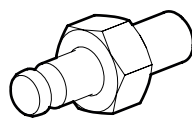


x 2



x 8



x 2

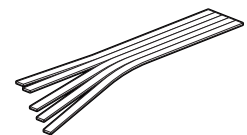

5 x 1m



The contents of the kit may vary for different car models

Mountain Top 2

Spare parts

P09

